




BIRD BATH
GENERAL ASSEMBLY RECOMMENDATIONS
[HAZELWOOD BIRD BATH SHOWN]

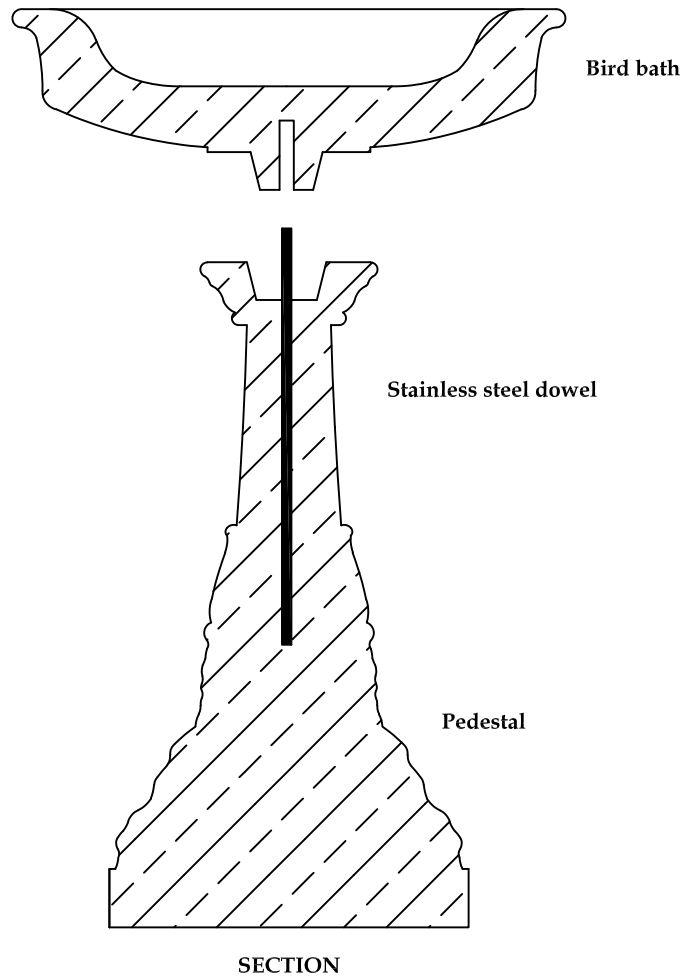

ASSEMBLY INSTRUCTIONS:

Carefully align the stainless steel dowel with the socket.
Gently lower the bird bath onto the pedestal.

We recommend that two people carry out this assembly.


Please note that Haddonstone cannot accept responsibility
for damage if these instructions are ignored.




BIRD BATHS




HC500
REGENCY BIRD BATH
ON PEDESTAL HB330
REGENCY FOUNTAIN HC510

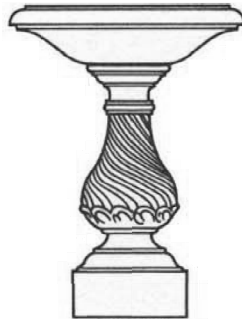

HC340
GEORGIAN BIRD BATH

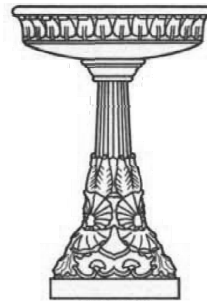

HC280
HAZELWOOD BIRD BATH

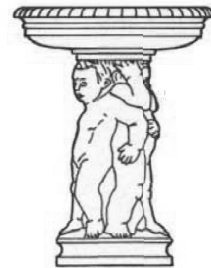

C330
FIGURED BIRD BATH


SUNDIALS




JACOBEAN FIGURED SUNDIAL
PLINTH D280, PEDESTAL B150
DIAL X710



D250
XVIII CENTURY SUNDIAL
DIAL X700

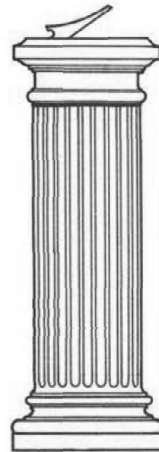

D150
DORIC SUNDIAL
DIAL X700

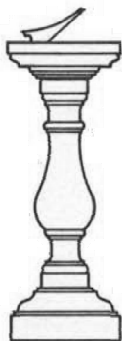


D140
BALUSTER SUNDIAL
DIAL X700



D260
GEORGIAN SUNDIAL
DIAL X700



D135
ADAM SUNDIAL PLINTH
DIAL X710

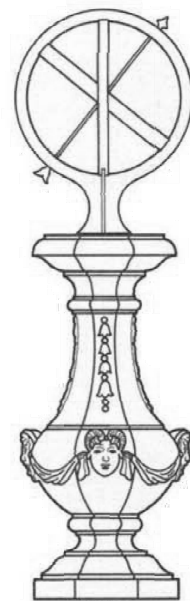

D130
ADAM SUNDIAL PLINTH
X714
ARMILLARY SPHERE

For Bird Bath assembly recommendations see tech-sheet GAR3.

For Handling Instructions see tech-sheet GAR5.


For dimensions and weights refer to brochure.




HADDONSTONE

HADDONSTONE POINTING RECOMMENDATIONS


Required: pointing mix, pointing trowel, masking tape, mixing bowl, water, mist sprayer.
Please note: all text and photographs relate to Haddonstone semi-dry pointing mix.

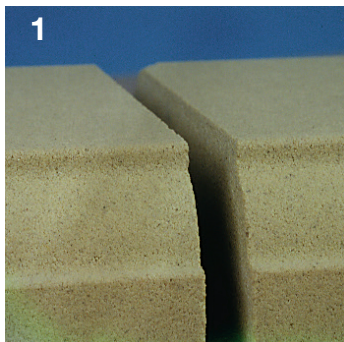

1
Before pointing ensure each 6mm (1/4") joint is free from loose particles. Avoid pointing in extreme conditions, particularly wet and cold.

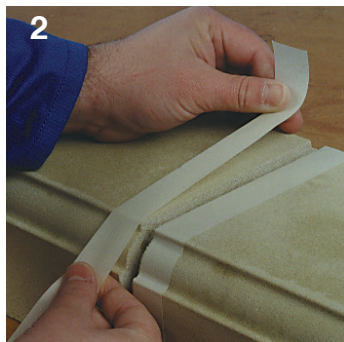

2
Apply masking tape to both sides of the joint, keeping the tape approximately 1mm (1/16") from the edge of the joint.

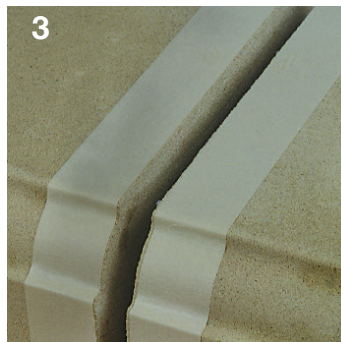


3
The joint is now ready to start pointing.




4
Carefully add small quantities of water to the Haddonstone pointing mix, mixing thoroughly to ensure the water is fully dispersed.
*See note below.




5
The Haddonstone pointing mix is ready to use when it has the consistency of damp sand. *See note below.

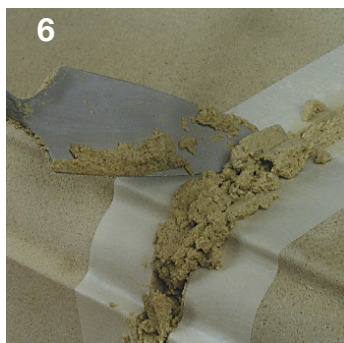


6
Scoop the mix into the joint, pressing with a trowel to ensure an even fill.

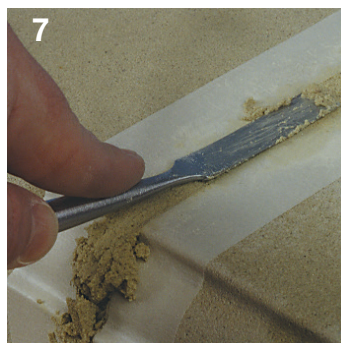


7
Smooth the pointing mix to the profile of the stone, removing any excess pointing mix.

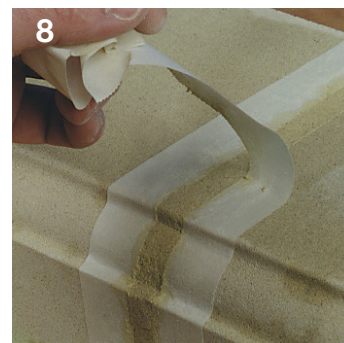


8
Carefully remove the masking tape.

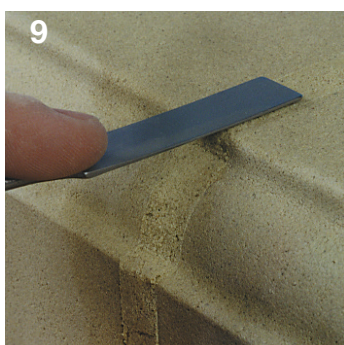


9
If necessary trowel over the joint once more to ensure a flush finish.

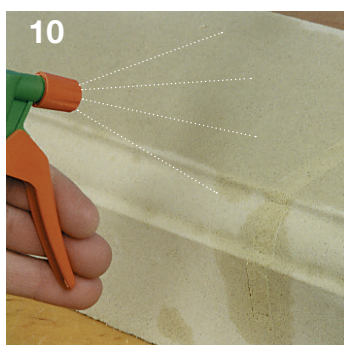

10
Apply a fine and even mist of water to the joint to prevent drying out.

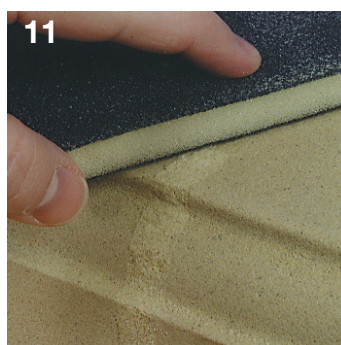

11
Any mix residue may be rubbed away with fine abrasive paper 2-3 days after completion.

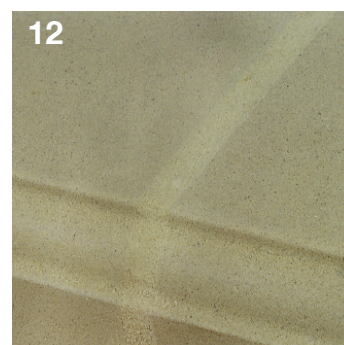

12
The finished joint.

* NOTE: It would be advantageous to use a waterproofing additive in the mixing water (SBR or other proprietary mortar admixture). The use of too much water can lead to the pointing mix colour and texture becoming unsightly, and the possibility of the mix bleeding into the adjacent cast stone.

Haddonstone Ltd

The Forge House, East Haddon, Northampton NN6 8DB, England
Telephone: 01604 770711 Fax: 01604 770027 info@haddonstone.co.uk

Haddonstone (USA) Ltd

32207 United Avenue, Pueblo, CO 81001, USA
Telephone: 719 948 4554 Fax: 719 948 4285 stone@haddonstone.com

www.haddonstone.com




HADDONSTONE

TECSTONE POINTING RECOMMENDATIONS

Required: pointing mix, pointing trowel, masking tape (if required), mixing bowl, water, sponge.

Please note: all text and photographs relate to TecStone pointing mix.

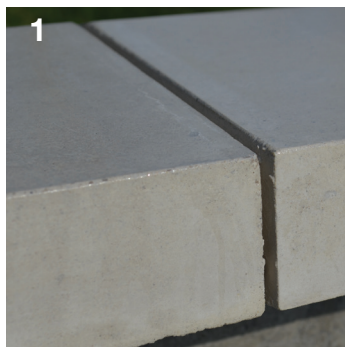


1
Before pointing ensure each 6mm ($\frac{1}{4}$ ") joint is free from loose particles. Avoid pointing in extreme conditions, particularly wet and cold.



2
The TecStone pointing mix is supplied as separately bagged cement and aggregate with an information leaflet.




3
The cement and aggregate should first be mixed together dry in the ratio of 1 part cement to 4.5-6.5 parts aggregate.

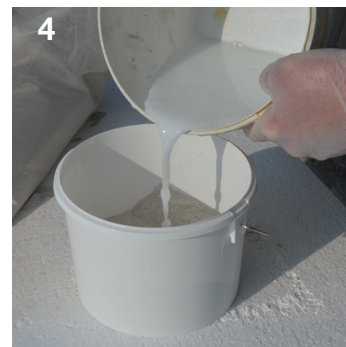


4
Carefully add small quantities of water to the TecStone pointing mix, mixing thoroughly to ensure the water is fully dispersed. *See note below.




5
The TecStone pointing mix is ready to use when it has the consistency of putty. *See note below.

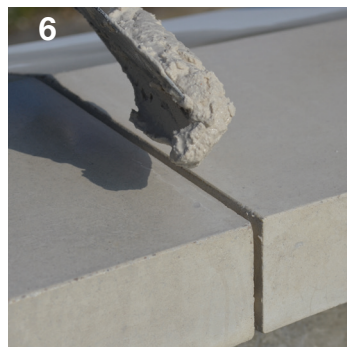

6
Scoop the mix into the joint, pressing with a trowel to ensure an even fill.

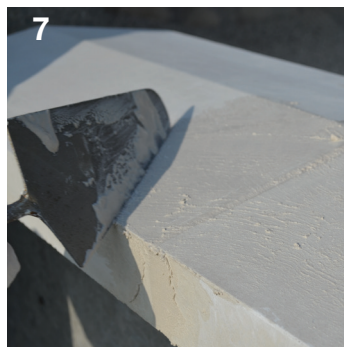

7
Smooth the pointing mix to the profile of the stone, removing any excess pointing mix.

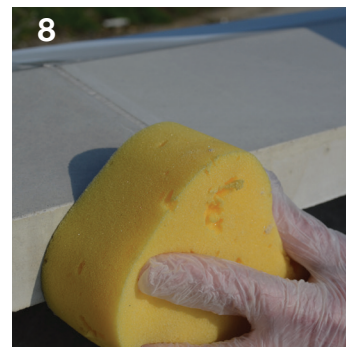

8
Wipe over the surface of the joint and surrounding area with a dampened sponge to remove all surplus pointing material off the surrounding areas and ensure a flush finish to the joint.



9
If necessary trowel over the joint once more to ensure a flush finish.



10
Any mix residue may be rubbed away with fine abrasive paper 2-3 days after completion.



11
The finished joint.

* NOTE: It would be advantageous to use a waterproofing additive in the mixing water (SBR or other proprietary mortar admixture). The use of too much water can lead to the pointing mix colour and texture becoming unsightly, and the possibility of the mix bleeding into the adjacent cast stone.

Haddonstone Ltd

The Forge House, East Haddon, Northampton NN6 8DB, England
Telephone: 01604 770711 Fax: 01604 770027 info@haddonstone.co.uk

Haddonstone (USA) Ltd

32207 United Avenue, Pueblo, CO 81001, USA
Telephone: 719 948 4554 Fax: 719 948 4285 stone@haddonstone.com

www.haddonstone.com